



## LOG INSTRUCTIONS



---

# IMPORTANT

## WARNING: DC SUPPLY 12V

- IMPORTANT: Each log must be wired in the correct order and direction or a failure will occur. Disconnect the fire from the mains power supply until installation is complete.



---

# CONTENTS

What's in the box..... 4

E-FX Log Instructions..... 6

E-FX Log Layouts..... 12

E-FX - SL Log Layouts ..... 13

Spares & Repairs Codes ..... 14

---

## BOX CONTENTS



**E-GLO LOGS**



**LAVA ROCK**



**CLEAR GLASS**

# E-FX LOG INSTRUCTIONS

## IMPORTANT

Each log must be wired in the correct order and direction or a failure will occur. Refer to the instructions before undertaking installation of the logs. Disconnect the fire from the mains power supply until installation is complete.

## 01 - PLACE THE LOGS

Starting at the right hand side, place the logs in the positions shown printed on the fuel bed. The logs have numbers on that tell you where to put them. See Page 12 for the layout for your fire.



## 02 - CONNECT THE LOGS

Starting at the right hand side again, plug Log 1 into the connector marked A on the fuel bed.

## IMPORTANT

Make sure that the connectors are fitted securely and fully engaged. Poor connections lead to faults.

---

# E-FX LOG INSTRUCTIONS

## 03 - CONNECT THE LOGS

Connect the logs together using the wires. You can only plug them in one way. Work your way from right to left, making sure all connections are tight and secure.



---

# E-FX LOG INSTRUCTIONS

## 04 - CONNECT THE FUEL BED

Connect the far left log to connector B. This completes the log wiring.



1. As you l

6. On the left si



---

# E-FX LOG INSTRUCTIONS

## 05 - HIDE THE CONNECTORS

Now everything is connected, make sure all the wires are hidden behind or underneath the logs, making sure you can not see them.



## 06 - ADD THE EMBERS

Printed on the fuel bed are outlines showing where the different types of aggregate go. Starting with the clear glass, place the crushed glass onto the fuel bed. Next use the lava rock to fill the rest of the fuel bed, placing some over the clear glass.





---

## E-FX LOG LAYOUTS



**E-FX 450**



**E-FX 1000**



**E-FX 1300**



**E-FX 1500**



**E-FX 1800**

---

## E-FX SL LOG LAYOUTS



**E-FX SL 600**



**E-FX SL 750**



**E-FX SL 1000**

# PART CODES

PART NAME	PART CODE
E-FX Log 1	FE191
E-FX Log 2	FE192
E-FX Log 3	FE193
E-FX Log 4	FE194
E-FX Log 5	FE195
E-FX Log 6	FE196
E-FX Log 7	FE197
E-FX Log 8	FE198
E-FX Log 9	FE199
E-FX Log 10	FE200
Clear Glass	FE216
Lava Rock	FE218
E-FX SL - Log 1	FE201
E-FX SL - Log 2	FE202
E-FX SL - Log 3	FE203
E-FX SL - Log 4	FE204
E-FX SL - Log 5	FE205
E-FX SL - Log 6	FE206



**[www.flameritefires.com/efx](http://www.flameritefires.com/efx)**

Flamerite Fires Ltd, Greenhough Road, Lichfield, Staffordshire WS13 7AU

**Tel:** 01543 251122 | **Fax:** 01543 251133 | **Email:** [info@flameritefires.com](mailto:info@flameritefires.com)

**These products are only suitable for well insulated spaces or occasional use.**

Manufactured in the United Kingdom. All products are protected by patents, registered design and intellectual property rights. Flamerite Fires Ltd. will protect these rights.

All specifications are correct at the time of publishing but are subject to change.



ELECTRIC FIRES MADE IN EUROPE